


Installation Instructions for: STANDARD SHOWER BASES







(WARRANTY WILL NOT APPLY IF THESE INSTRUCTIONS ARE NOT FOLLOWED)

End View of Standard Base

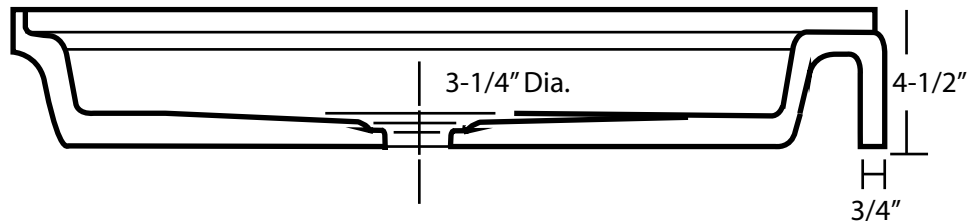

- 1) Insure that all debris is cleared from the area. Make sure stud walls and sub floor are free of protruding nails.
- 2) Install floor drain according to instructions provided with drain assembly.
- 3) Set shower base in place to insure that it is level, does not rock and fits snugly to studs on all sides.
 - A) It is important you check the level front to back and side to side. Put your level on top of curb.
 - B) Use panel adhesive or silicone on bottom of base to adhere to sub floor.
 - C) You may need to use mortar mix or thin set under your base to insure the base is level and has full even contact with floor.

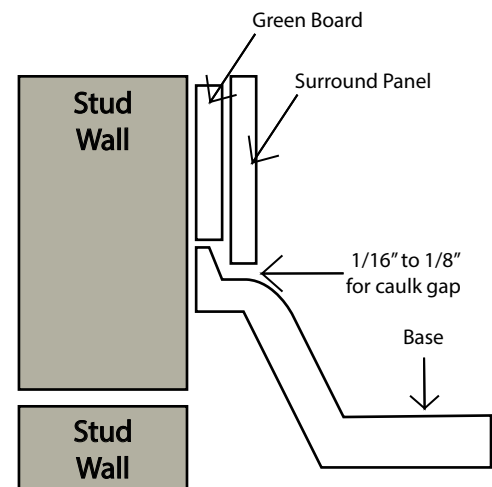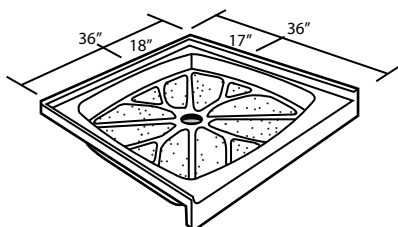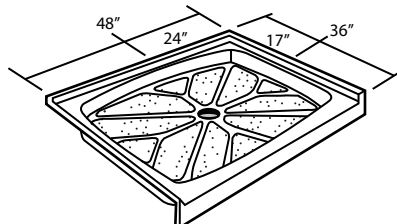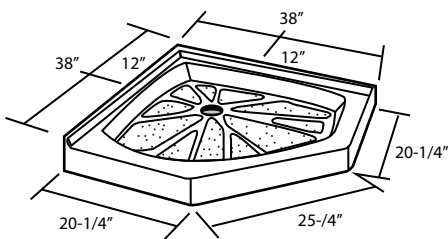

2700 Atlantic Blvd., N.E. Canton, Ohio 44705-3923 Telephone: 330-453-8437 or 800-288-4095

Website: www.amisurfaces.com

Email: amiinfo@amitops.com

Fax: 330-453-4913

3-20-15